



# Nexus S Speaker Replacement

Replace the speaker in your Nexus S.

Written By: Walter Galan



## INTRODUCTION

This guide will help you replace the speaker in your Nexus S.

---

### TOOLS:

- [Metal Spudger](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Rear Panel



- Gently insert a plastic opening tool between the rear panel and the inner rear frame near the rear-facing camera.
- Use your plastic opening tool to pry up the rear case around the perimeter of the Nexus S.

## Step 2



- Remove the rear panel from the Nexus S.

## Step 3 — Battery



- Using the edge of a plastic opening tool, lift the battery from the end closest to the headphone jack.
- Remove the battery from the Nexus S.

## Step 4 — SIM Card



- Use your thumb to slide the SIM card downwards from the SIM card slot.
- Remove the SIM card.



## Step 5 — Rear Inner Frame



- Remove the six Phillips screws securing the rear inner frame to the inner case.

## Step 6



- Insert the flat edge of a plastic opening tool in between the rear inner frame and the top left corner of the Nexus S.
- Pry the opening tool upwards to pop the top right corner from the clips securing it to the inner assembly.

## Step 7



- Insert the plastic opening tool to the right of the power button.
- Slide the plastic opening tool downwards along the perimeter of the Nexus S to release the clips on the right side.

## Step 8



- In the same manner as previously described, release the bottom clips located near the bottom of the Nexus S.

## Step 9



- Insert and pry the plastic opening tool to release the final clip securing the rear inner frame to the inner assembly.


## Step 10



- Lift and remove the rear inner frame from the Nexus S.






## Step 11 — SIM Card Board

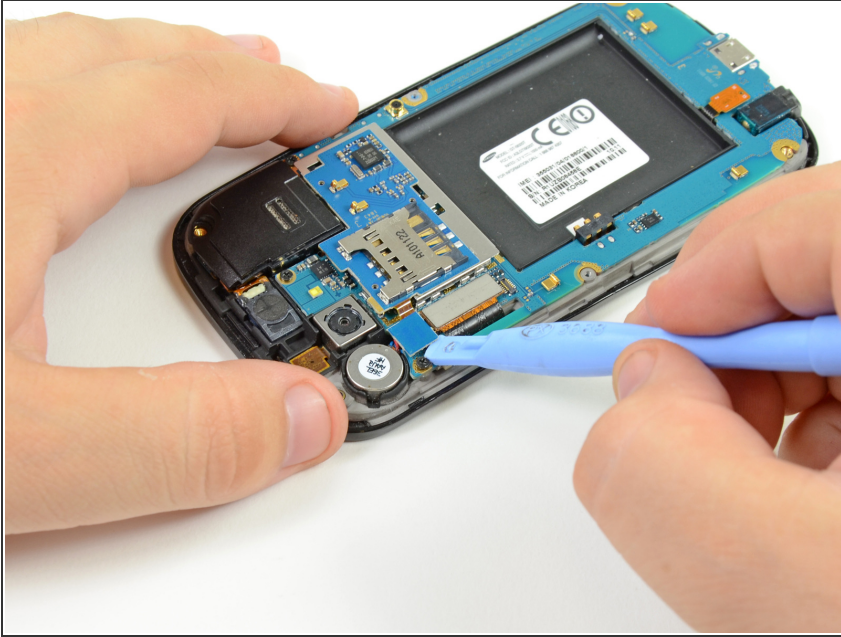

- Use the flat edge of a plastic opening tool to pry the SIM Board connector off its socket on the motherboard.


## Step 12

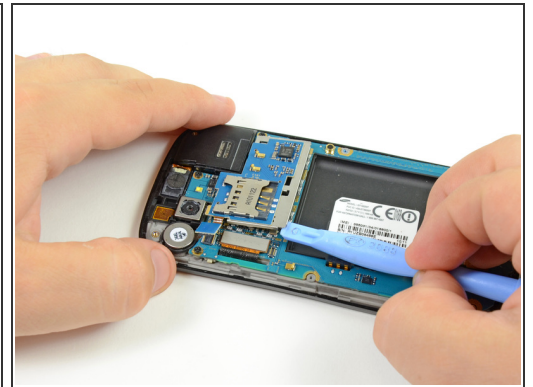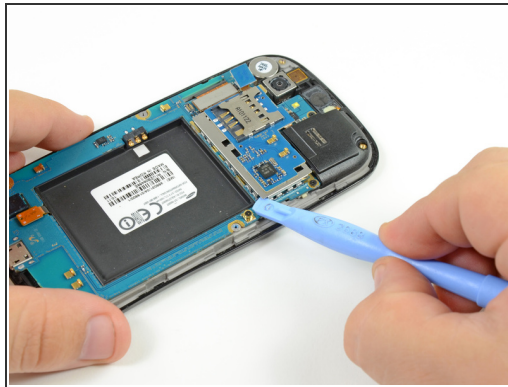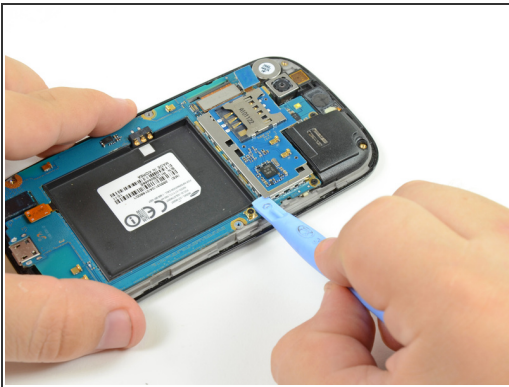

- Wedge the edge of a plastic opening tool underneath the SIM Card board and motherboard.
- Pry the clips located near the right bottom edge of the SIM Card board up off the motherboard.
- Repeat the process all along the bottom perimeter of the SIM Card board until all clips have been disengaged.



## Step 13

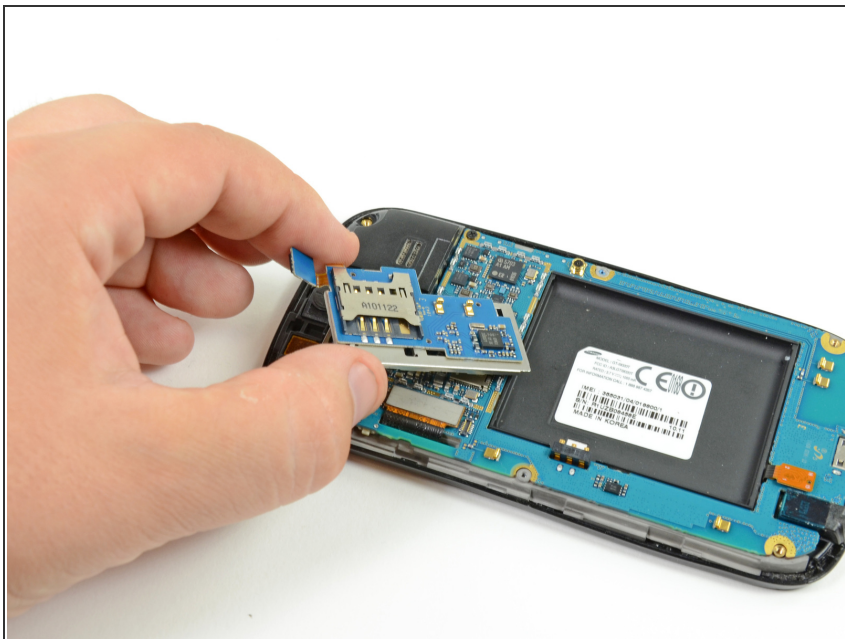


- Lift and remove the SIM Card board out of the Nexus S.

## Step 14 — Motherboard



- Disconnect the following cables from their respective sockets on the motherboard:
  - Headphone jack cable
  - Digitizer cable connector
  - Camera/SIM board connector

## Step 15

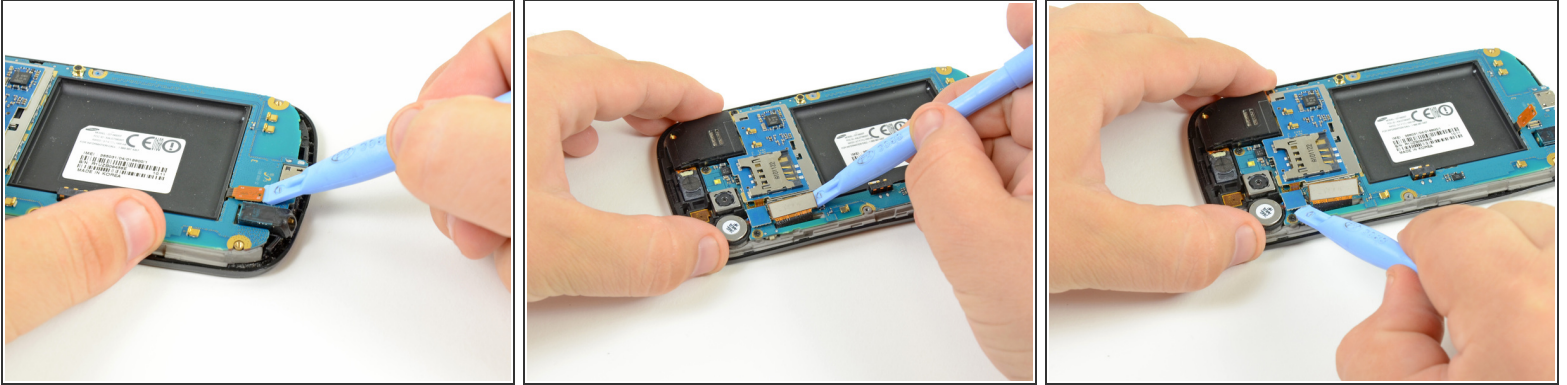

- Insert the flat edge of a plastic opening tool underneath the headphone jack connector and pry upwards.
- ⚠ Make sure to pry on the connector and not the socket itself. Prying the socket may cause severe damage.
- Repeat the procedure for the digitizer and rear camera/SIM board connectors.

## Step 16



- Remove the three Phillips screws securing the motherboard to the front display assembly.

## Step 17




- Wedge the plastic opening tool near the bottom right corner of the motherboard and pry upwards to dislodge it from its recess.
- Lift and remove the motherboard.

## Step 18 — Speaker



- Speaker remains.

 Be careful, the earpiece part is united with the speaker, you could cut the flex.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 11:19:17 PM.